 


Bearing-distance-heading Indicator - Page 1 of 1



■ ■

When repair is beyond lower level maintenance capability evacuate the item to depot disposal is not authorized below wholesale level